





PART# 70-4340-68

# T-Top Weatherstrip Set

1978-1979 Dodge Magnum  
1977-1979 Chrysler Cordoba

This complete eight (8) piece T-Top Weatherstrip Set is designed from the original part for superior fitment and seal. These high-quality weatherstrips fit and work to seal the lift-off T-Top roof panels and side windows when the window is fully raised.

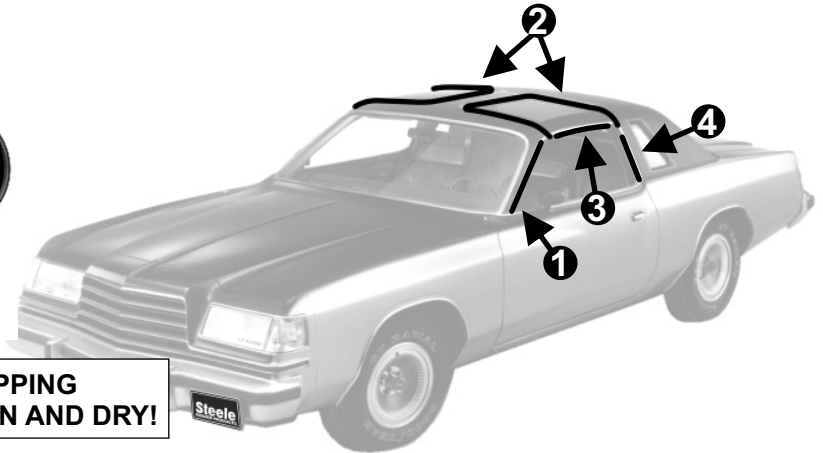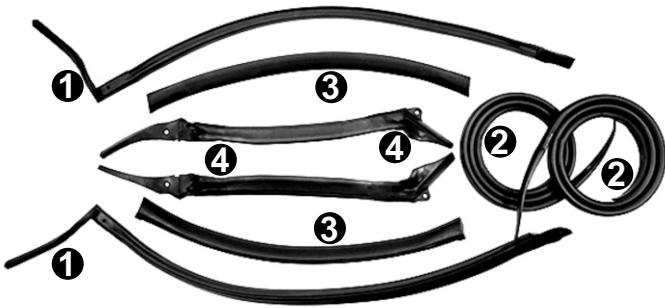

**IMPORTANT! REMOVE ALL OLD WEATHERSTRIPPING AND MAKE SURE METAL SURFACES ARE CLEAN AND DRY!**

## A-Post ① & B-Post ④ Weatherstrip (both have RIGHT & LEFT)

- Remove screws from guide pin plate.
- Remove weatherstripping and clips - SURFACE MUST BE CLEAN & DRY!
- Start installation at the bottom by pressing in the clips
- Tuck weatherstripping into retaining channel with a blunt tuck tool
- Wrap upper section around to appropriate location, mark screw locations, and glue down with 3M Super Weatherstrip Adhesive (Steele Part# 96-8008-96)
- Replace guide pin plate by pushing screws through the rubber flap area

## T-Top Perimeter Weatherstrip ②

(No RIGHT & LEFT, but thicker side of weatherstrip is towards the outside of the panel)



- Remove old weatherstripping - SURFACE MUST BE CLEAN & DRY!
- Find center of new seal by folding in half and marking with a black pen
- Find center of the T-top panel's inner edge
- Begin installation by gluing at the centers and working out towards the ends
- Trim ends to line up with decorative trim

## T-Top Side Weatherstrip ③ (No RIGHT & LEFT)

- Remove old weatherstripping - SURFACE MUST BE CLEAN & DRY!
- Tuck new seal into retaining track with a blunt tuck tool
- Be sure the angled ends are positioned so they narrow towards the vehicle