


60-0655-21



Front Door Conduit For Power Window Wires
And/Or Power Lock Vacuum Lines.

Kit Includes:

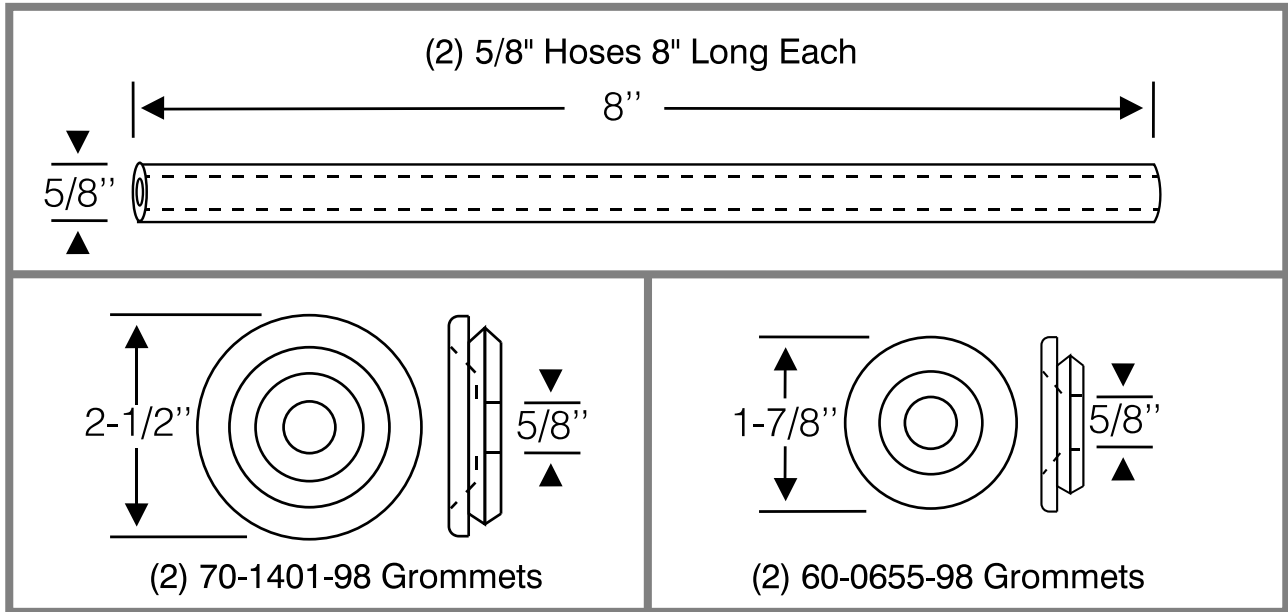

Slide Grommets Onto Hose As Shown:

